

# INSTRUCTIONS

## **⚠ WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.**

Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

**⚠ WARNING:** ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. To avoid the risk of electrical shock, always make sure the figure is unplugged from the electrical outlet before assembling, disassembling, or relocating.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

**⚠ WARNING:** This product is to be assembled by adults only.

## **IMPORTANT SAFETY INSTRUCTIONS WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:**

---

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. This product is equipped with push-in type lamps. Do not twist lamps.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. Do not use this product for other than its intended purpose.
10. Do not hang ornaments or other objects from cord, wire, or light string.
11. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
12. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
13. Do not place the product against carpeting, furniture, or any other fabric when in use.
14. This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit condition. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product markings for proper fuse rating) and check the product. If replacement fuse blows, a short-circuit may be present and the product should be discarded.
15. Read and follow all instructions that are on the product or provided with the product.

## **SAVE THESE INSTRUCTIONS**

## **USE AND CARE INSTRUCTIONS**

 
---

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

**Congratulations!** You're the proud owner of your very own Tinsel sculpture Olaf from Gemmy! Below, we hope you'll find the answers to many questions, and how to get maximum enjoyment from it for years to come!

Please read over the directions carefully before installing and operating this item. Some assembly is required.

## CONTENTS

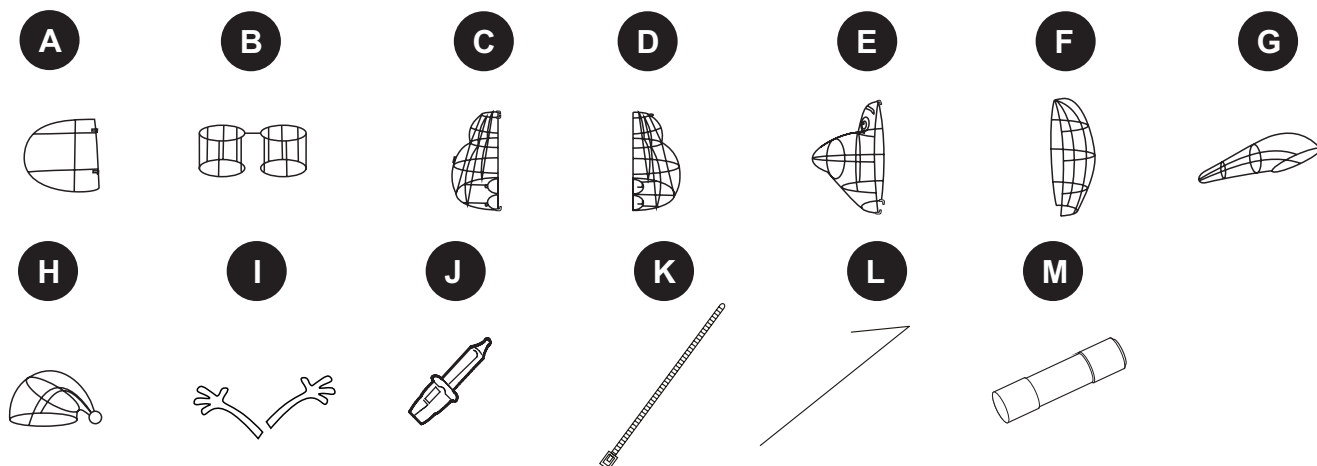

PART	DESCRIPTION	QUANTITY
A	Body base	1
B	Feet	1
C	Body-front	1
D	Body-back	1
E	Head-front	1
F	Head-back	1
G	Nose	1

PART	DESCRIPTION	QUANTITY
H	Cap	1
I	Hand( left/right )	2
J	Extra lamp	2
K	Plastic tie	20
L	Yard stake	4
M	Extra fuse 3A, 125V	1

## ASSEMBLY INSTRUCTIONS

1. Gently remove all contents from the packaging, and lay them out in a clear area.

2. Attach the feet(B) to the body base(A) by sliding the post into the slot, then use plastic tie(K) to secure.

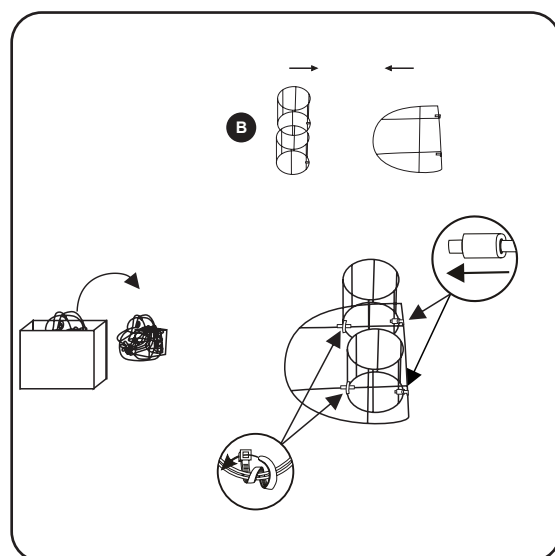 


illustration 1

3. Attach body-front(C) to body-back(D) by sliding the post into the slot, hook the two body parts together and use plastic tie(K) to secure.

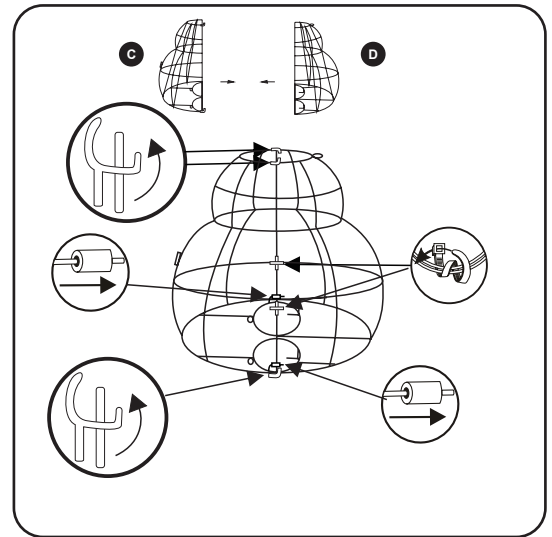 


illustration 2

4. Attach the feet(B) to the bottom of the body by sliding the post into the slot, and use plastic tie(K) to secure.

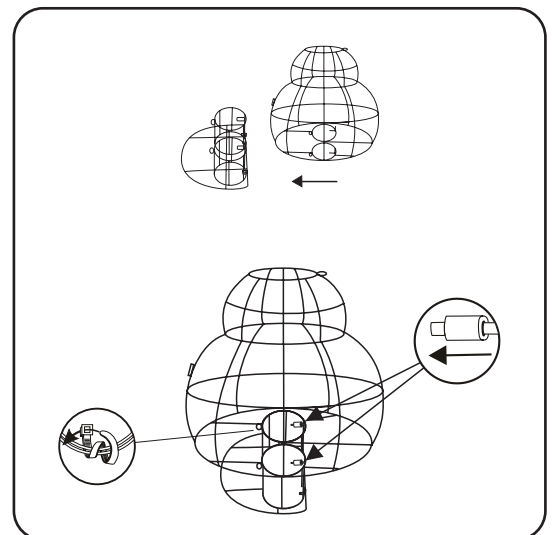 


illustration 3

5. Connect head-front(E) and head-back(F) together with the hooks, and then use plastic tie(K) to secure.

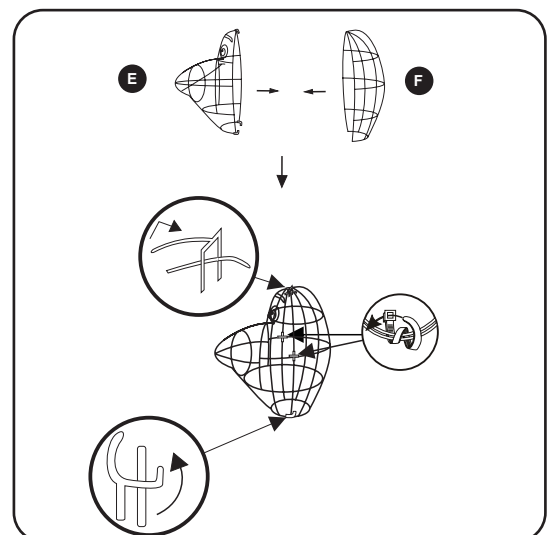 


illustration 4

6. Attach the head onto the body as shown in illustration 5, then use plastic tie(K) to secure.

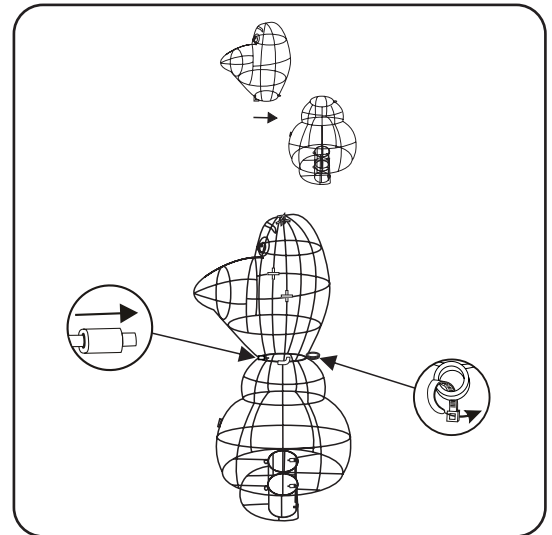 


illustration 5

7. Insert the nose(G) into the head, and place the cap(H) on the top of the head as shown in illustration 6.

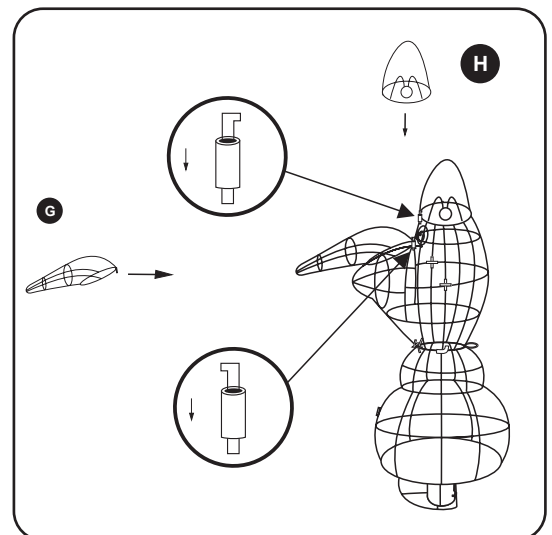 


illustration 6

8. Attach the hands (I) to the body by sliding the post into the slot.

9. Use yard stake(L) to secure Olaf firmly to the ground.

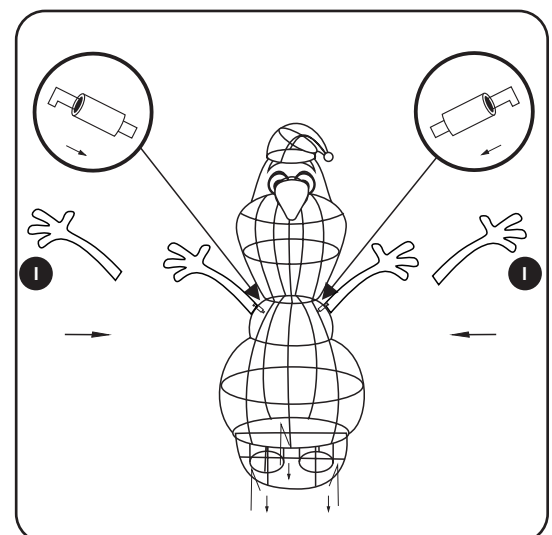 


illustration 7

**CAUTION:** The frame straps (Plastic ties) shall not be placed around any conductor wire during assembly!

**Disassembly Instructions** --- Please refer to assembly instruction above, however in reverse order.  
Approximate Assembly time: 10-15 minutes.

## USER SERVICING INSTRUCTIONS

 
---

### Fuse Replacement

**WARNING:** **Risk of Fire:** Replace fuse only with 3 Amp Max, 125 Volt fuse (provided with product).

**WARNING:** **Risk of Fire:** Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades (see illustration).
3. Remove fuse carefully.
4. Replace fuse only with same size and type of fuse.
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

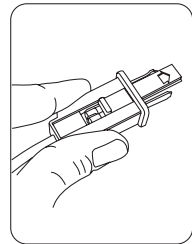

### To replace lamp:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Pull lamp and plastic base straight out of lampholder.
3. Replace lamp with 2.4 Volt, 0.39 Watt regular brightness type lamps (provided with product). If the new lamp base does not fit in lampholder, follow the steps below before step 3:



1. Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
2. Thread leads of new lamp through holes in old base with one lead in each hole.
3. After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.

## CAUTION

---

1. Risk of fire. This product contains lamp shunts, which allow the product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product.
2. To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal. b) Do not mount or support strings in a manner that can cut or damage wire insulation.

## CAUTION

---

1. Use 2.4 Volt, 0.39 Watt steady lamps only (provided with product).

## WARNING

---

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

Do not remove light string off the product and hang on trees or other places for decoration.

## DISASSEMBLY INSTRUCTIONS

---

Please refer to assembly instruction above, however in reverse order.

## STORAGE

---

Do not discard the box, it can be used to store the product. Store in a cool, dry location.

## TROUBLE SHOOTING CHECKLIST

---

If the item is not operating, the problem may be:

1. The power source is disabled or the cord is unplugged.

**NOTE:** ONCE THE ITEM IS UNPLUGGED, THE PRODUCT WILL CEASE OPERATION.

## FREQUENTLY ASKED QUESTIONS (FAQs)

---

### **1. Can I leave it running overnight?**

We recommend that you turn off while unattended. Extended use beyond 8 hours will not damage this item.

### **2. How much electricity does it use?**

Please refer to the tag attached to the power cord.

### **3. What is the best way to store it?**

Store dry in a bag, box or other storage container and keep in a cool, dry location.

### **4. My area is prone to unusually windy conditions, will this affect the product?**

In order to prevent damage, we suggest you keep the product protected from high winds by simply relocating the item to a sheltered area until wind conditions improve.

### **5. What if it is raining or snowing? Will this affect the product?**

Operation in light weather conditions, such as a gentle rain or snowfall is fine.

### **6. I have extra plastic Ties. What are these for?**

You may use these to further secure the product in areas needed...as desired.

## THESE INSTRUCTIONS ARE FOR ITEM NUMBER

---

37496

© Disney



Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.  
©2015 GEMMY INDUSTRIES CORP.  
117 WRANGLER DRIVE, SUITE 100  
COPPELL, TX 75019 U.S.A.  
1(877)250-9032  
MADE IN CHINA / PRINTED IN CHINA